

DIAGRAMAS DE LEITURA

Família GM BCM BODY



– UNIDADES ATENDIDAS PELA CARGA GM BCM BODY (Novidade):

- Geralmente lê processador e eeprom;
- OPEL DELPHI BCM 70F3238 + 93C86 CAN. EEPROM 93C86 R/W, mostra PIN;
- OPEL DELPHI BCM 70F3379 + 93C86 CAN. EEPROM 93C86 R/W, mostra PIN;
- OPEL DELPHI BCM 70F3633 CAN flash de dados lido, mostra o PIN;
- OPEL DELPHI BCM 70F3634 CAN flash de dados lido, mostra o PIN;
- OPEL / GM BOSCH BCM 70F3469 + 24C16. 70F3469 FLASH R. EEPROM 24C16 R/W mostra PIN, altera VIN e odômetro;
- OPEL / GM BOSCH BCM 70F3385 + 24C16. 70F3385 FLASH R. EEPROM 24C16 R/W mostra PIN, altera VIN e odômetro;
- OPEL / GM BOSCH BCM 70F3558 + 24C32. 70F3558 FLASH R. EEPROM 24C32 R/W mostra PIN, altera VIN e odômetro;
- OPEL / GM CONTINENTAL BCM 70F3469 + 95160 (25160). 70F3469 FLASH R. EEPROM 95160 (25160) R/W mostra PIN, altera VIN e odômetro;
- OPEL / GM BCM CONTINENTAL 70F3558 + 95320 (25320) .70F3558 FLASH R. EEPROM 95320 (25320) R/W mostra PIN, altera VIN e odômetro;

GM CONTINENTAL / BOSCH

OPEL / GM BOSCH BCM 70F3469 + 24C16

OPEL / GM BOSCH BCM 70F3385 + 24C16


OPEL / GM BOSCH BCM 70F3558 + 24C32

OPEL / GM CONTINENTAL BCM 70F3469 + 95160 (25160)

OPEL / GM BCM CONTINENTAL 70F3558 + 95320 (25320)

OPEL / GM BCM CONTINENTAL 70F3558 + 95640 (Não Testado)

DIAGRAMA DE LEITURA – CONECTOR BANCADA ou OBD

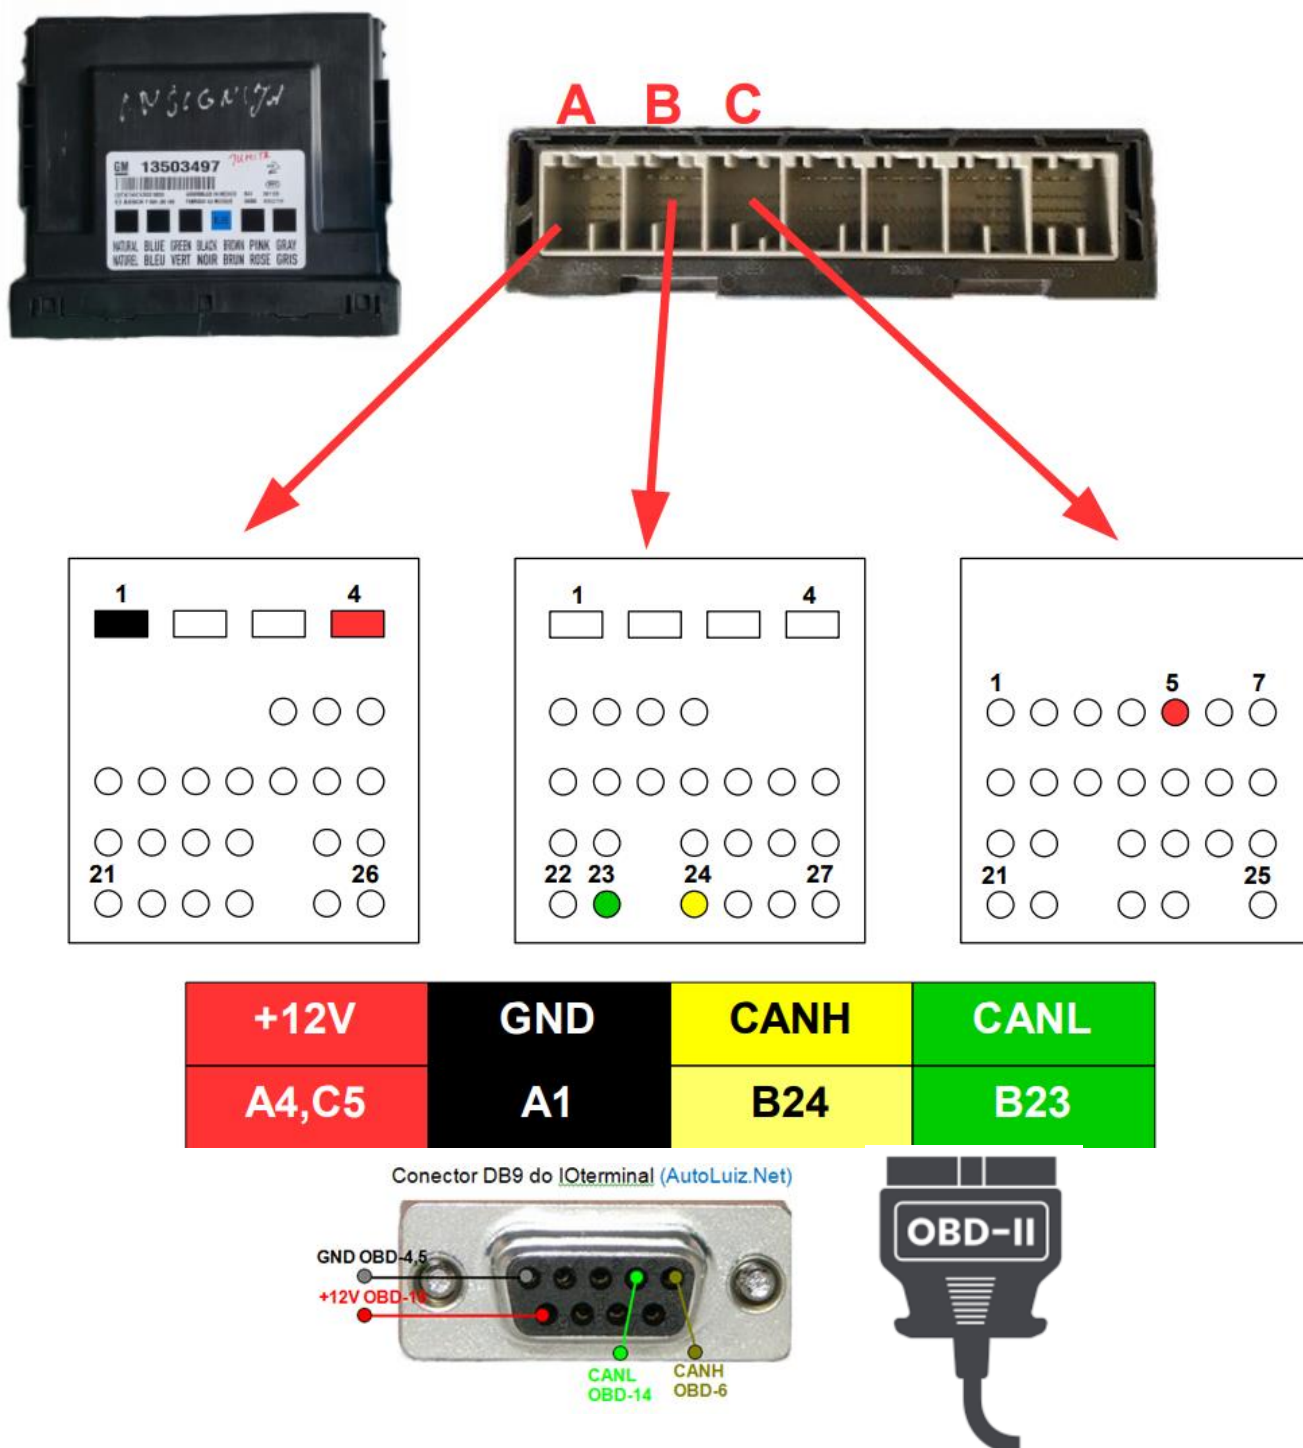


GM DELPHI


70F3238+93C86

70F33+93C86

DIAGRAMA DE LEITURA – CONECTOR BANCADA ou OBD

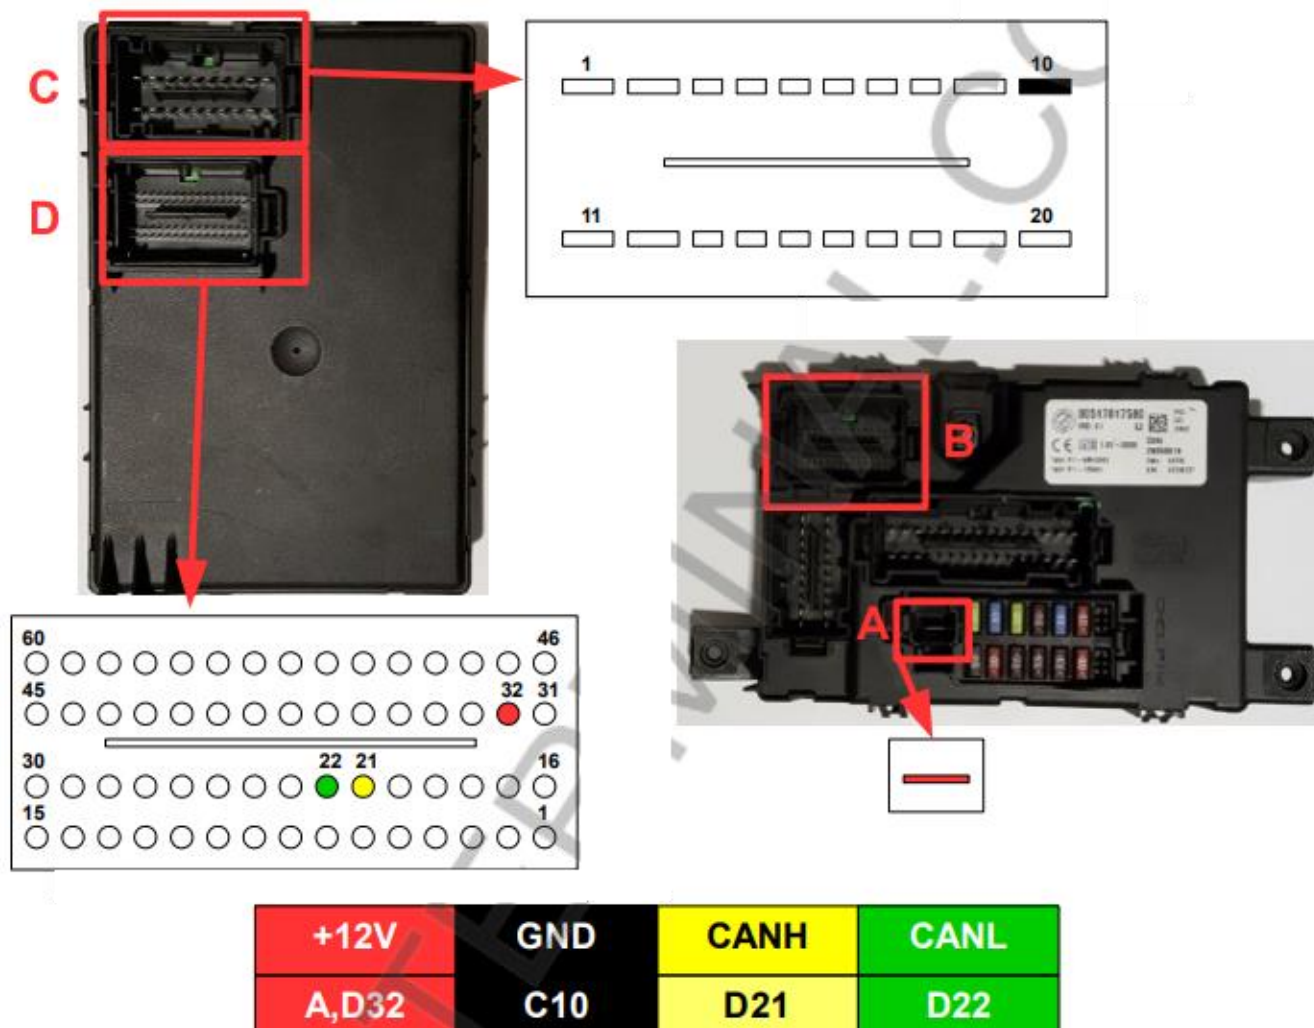


Conector DB9 do IOterminal (AutoLuiz.Net)

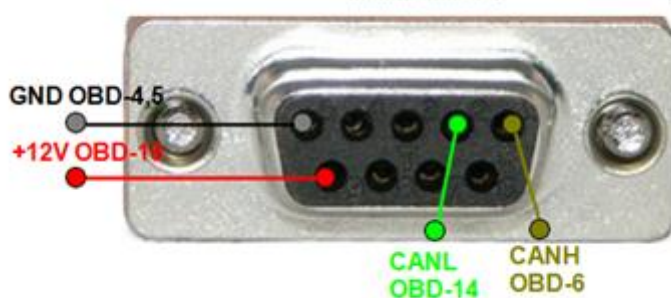

GM DELPHI

70F3633

DIAGRAMA DE LEITURA – CONECTOR BANCADA ou OBD

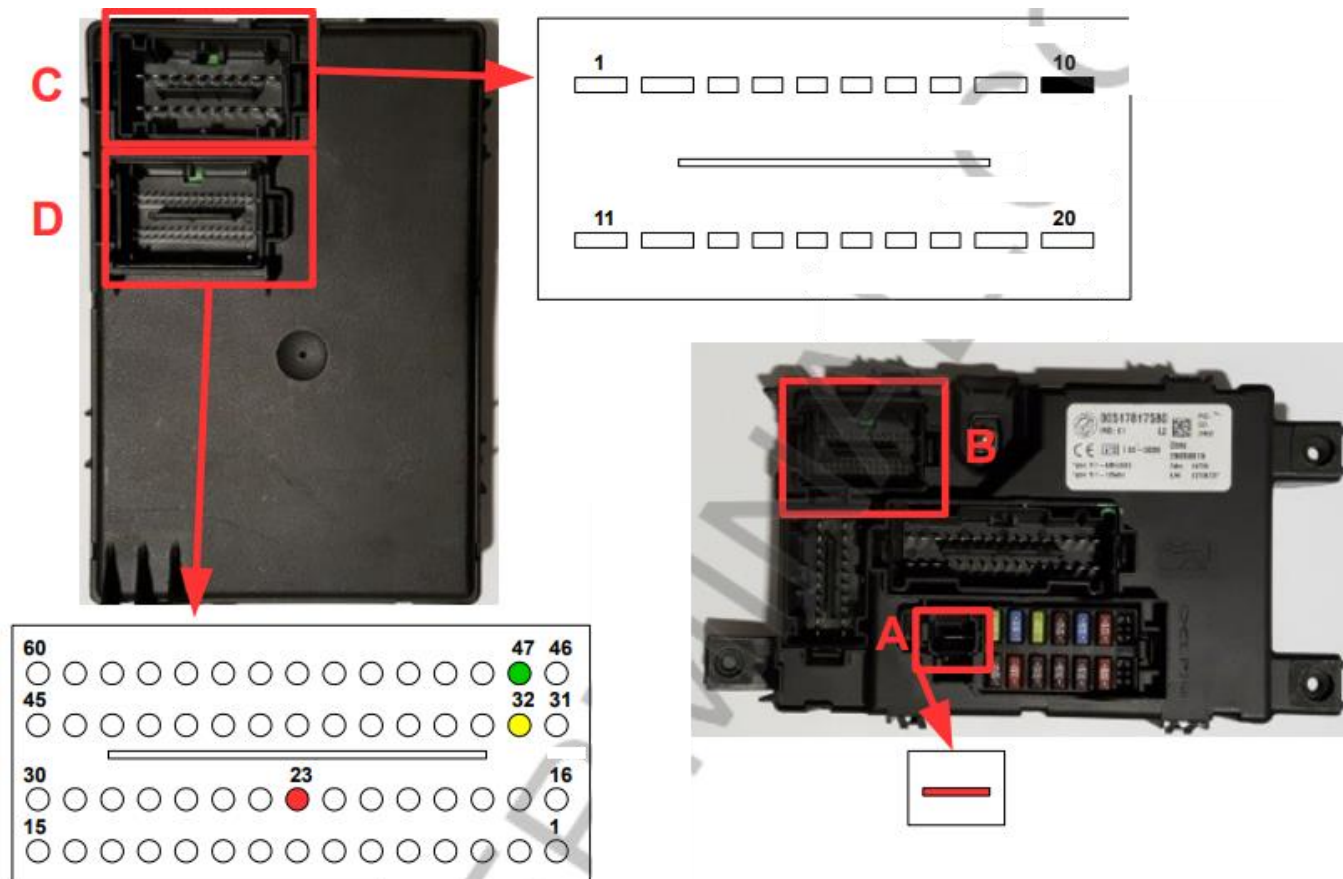

+12V	GND	CANH	CANL
A,D23	C10	D32	D47

